



MATHEO



پلوپز

MRC 135 W

German ■

English ■

فارسی ■

مشتری گرامی ضمن تشکر از حسن سلیقه و اعتماد شما به برند متو امیدواریم از کار با این دستگاه لذت ببرید.

نکات ایمنی

۱. در استفاده از این دستگاه برقی، برای پیشگیری از هر گونه آسیب به کاربر و خطر آتش سوزی و نیز برق گرفتگی، نیاز است که توجه ویژه به نکات ایمنی زیر داشته باشید.
۲. تمامی دستورات ایمنی را مطالعه نمایید.
۳. از پریز برقی با ولتاژ و ظرفیت متناسب با دستگاه استفاده نمایید.
- پس از اتمام کار دستگاه، دو شاخه را از برق بکشید. به هیچ وجه دو شاخه دستگاه را به سه راهی همزمان با چند دستگاه دیگر متصل نکنید. همواره دو شاخه را به پریز دارای ارت متصل نمایید.
۴. از لمس سطوح داغ بپرهیزید.
۵. برای پیشگیری از خطر برق گرفتگی، از فرورکردن بدنه، سیم برق و همچنین شاخه دستگاه به آب و یا هر مایع دیگری خودداری نمایید.
- به منظور پیشگیری از خطر برق گرفتگی، برای پخت و پز فقط از دیگ جداشدنی خود دستگاه استفاده نمایید.
۶. نظارت بر دستگاه هنگامی که در حال پخت است ضروری می باشد. از استفاده دستگاه در حضور کودکان و همچنین بوسيله کودکان خودداری نمایید.
۷. هنگامی که از دستگاه استفاده نمی کنید و همچنین پیش از تمیزکاری، سیم برق را از دستگاه جدا کنید. هشدار: صفحه گرم کن، پس از استفاده نیز داغ خواهد بود؛ برای گذاشتن و یا برداشتن دیگ و همچنین تمیز کاری آن، ابتدا اجازه دهید خنک شود.
۸. در صورت آسیب دیدگی سیم برق، دو شاخه و همچنین بدنه دستگاه و نیز در صورت عملکرد نادرست دستگاه، از دستگاه استفاده نکنید؛ آن را به مراکز خدمات پس از فروش مجاز تحویل دهید.
۹. از آویزان ماندن سیم برق بر لبه های میز و سطوح تیز و داغ پیشگیری نمایید.
۱۰. از پر کردن مواد بیش از حد مواد غذایی (بیشتر از خط ماکزیمم) خودداری نمایید. در غیر اینصورت مواد از درون دیگ لبریز خواهد شد و موجب اتصالی برق خواهد شد.
۱۱. فقط از دیگ مخصوص خود دستگاه استفاده نمایید و نیز از ضربه زدن به دیگ خودداری نمایید.
۱۲. از این دستگاه برای جوشاندن مواد اسیدی و یا بازی (قلیایی) استفاده نکنید.
۱۳. از استفاده از دستگاه در فضای باز خودداری نمایید.

۱۴. از قرار دادن دستگاه در مجاورت اجاق گاز، فر، آون و اینچنین کالاها خودداری نمایید.

۱۵. فضای بین صفحه داغ شونده و کف دیگ را کاملاً تمیز نگاه دارید تا قطرات آب، دانه برنج، گردوخاک و یا هر جسم خارجی دیگری آنجا نباشد. در غیر اینصورت احتمال آسیب جدی به دستگاه وجود خواهد داشت.

۱۶. دیگ را بصورت صاف و عادی در دستگاه قرار دهید. در صورتی که کف دیگ کاملاً با صفحه داغ شونده در تماس نباشد احتمال آسیب جدی به دستگاه وجود خواهد داشت.


۱۷. این کالا می تواند توسط همه افراد از جمله کودکان بالای ۸ سال و حتی آنهایی که معلولیت های جسمی یا ذهنی دارند مورد استفاده قرار بگیرد. به شرط آنکه بر عملکردشان نظارت شود و یا استفاده ایمن از دستگاه بر ایشان آموزش داده شده باشد و از خطرات احتمالی مطلع باشند. از بازی کردن کودکان با دستگاه جلوگیری نمایید؛ همچنین تمیزکاری دستگاه و نگه داری آن نباید بوسیله کودکان انجام شود؛ مگر اینکه بالای ۸ سال و آموزش دیده باشند. دستگاه و سیم برق را دور از دسترس کودکان زیر ۸ سال قرار دهید.

۱۸. این دستگاه جهت مصرف خانگی طراحی و تولید شده است؛ هرگونه استفاده غیر خانگی و صنعتی باعث خارج شدن آن از گارانتی خواهد شد.

این کتاب را حفظ نمایید.

معرفی قطعات

فقط جهت استفاده خانگی

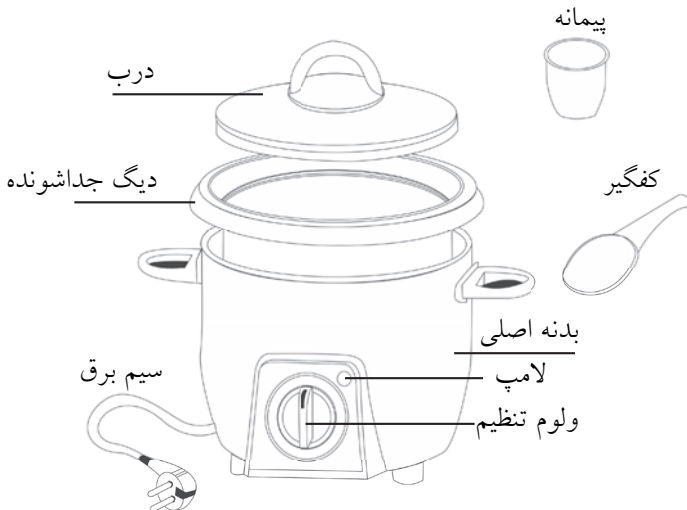

دستورات کاربری

۱. ابتدا برنج را درون دیگ جدا شونده بریزید. برای سنجش میزان آب مورد نیاز از علائم داخل دیگ کمک بگیرید. برای مثال اگر قصد پختن ۳ پیمانه برنج را دارید، پس از ریختن برنج شسته شده درون دیگ، تا خط ۳ آب روی برنج بریزید. توجه: این مقادیر استاندارد است، می توانید طبق ذائقه خود مقادیر را تغییر دهید. تمیزکاری داخلی بدنه و سطح داغ شونده، پیش از قرار دادن دیگ فراموش نشود. طبق تصویر دیگ را درون محفظه بصورت صاف به نحوی قرار دهید که کف دیگ کاملاً روی سطح داغ شونده قرار بگیرد. (عکس ۱)


*از شستن برنج درون دیگ خودداری کنید. چرا که باعث تغییر فرم دیگ شده و در نهایت تاثیر بر روند پخت خواهد داشت.

*هنگامی که دیگ پر از آب است آن را از دستگاه خارج نکنید.



عکس ۱

۲. سیم برق را به پریز بزنید. ولوم تنظیم را به تناسب نتیجه ی دلخواه پخت و متناسب با ذائقه خود بگردانید (حداکثر ۶۰ دقیقه زمان پخت). سپس تایمر شروع به کار خواهد کرد و لامپ پنل روشن خواهد شد. (عکس ۲)

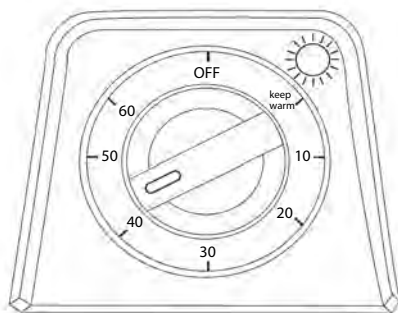

عکس ۲

۳. هنگامی که تایم به حالت ((0)) رسید، دستگاه وارد حالت گرم نگه داری می شود.
۴. پس از استفاده، ولوم تنظیم را در حالت OFF قرار دهید. سپس دو شاخه را از برق بکشید (دستتان را از خود دوشاخه بگیریید و سیم را نکشید).

نگهداری دستگاه


هشدار:

- پیش از تمیزکاری منتظر بمانید تا دستگاه کاملاً خنک شود.
- دستگاه را وارد آب و یا مایعات دیگر نکنید.
- به هیچ وجه برای تمیزکاری از مواد شیمیایی مثل تینر، انواع شوینده ظرف و لباس و سفید کننده ها استفاده نکنید.
- ۱- دیگ و درب شیشه ای را درون آب گذاشته، بوسیله اسفنج (ابر) آنها را تمیز کنید و سپس خشک کنید.
- تذکر: دقت کنید نمک غذا در دیگ جا نمانده باشد؛ چرا که باعث پوسیدگی خواهد شد.
- دیگ را با احتیاط حمل کنید تا از ضربه خوردن و دفرمه شدن پیشگیری کرده باشید.
- ۲- برای بر طرف کردن بقایای غذا بر روی بدنه اصلی، از یک دستمال نم دار استفاده کنید.
- ۳- می توانید برای تمیزکاری بدنه اصلی، از یک پارچه به همراه مقداری مایع ظرفشویی استفاده کرده و سپس با پارچه ای دیگر مواد شوینده را از بدنه پاک کنید.
- ۴- سیم برق و صفحه کنترل را همیشه تمیز و خشک نگه دارید؛ در غیر اینصورت باعث ایجاد مشکل خواهد شد.
- ۵- صفحه داغ شونده و سنسور حرارتی داخل محفظه را بوسیله دستمال نم دار تمیز کنید. همچنین برای بر طرف کردن بقایای برنج و غذا می توانید از کفگیر چوبی و یا اسفنجی نرم استفاده کنید.

توجه: هرگونه سرویس مورد نیاز دیگر فقط باید بوسیله نمایندگان مجاز خدمات پس از فروش انجام پذیرد.

بازیافت

با توجه به قوانین سازمان حفاظت از محیط زیست، این دستگاه را نباید با زباله های خانگی دور بریزید. بلکه به مرکز خدمات پس از فروش و یا مراکز بازیافت معتبر تحویل دهید.

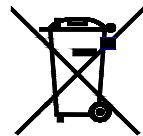

For proper and effective use of this Rice Cooker, please read these instructions thoroughly before use. Be sure to keep these instructions.

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following.

1. Read all instructions.
2. Use an electric wall receptacle with the proper voltage and capacity, and unplug the power plug after using. Never plug the power into a multiple socket with other electric appliances. Always use a power supply with reliable grounding.
3. Do not touch hot surface.
4. To protect against electric shock do not immerse the cooker body, cord or plug in water or other liquid.
5. To reduce the risk of electrical shock, cook only in removable pot.
6. Close supervision is necessary when the electric rice cooker is in use. Do not use it by children or near children.
7. Unplug from outlet when do not in use and before cleaning. **WARNING:** The heating element surface is subject to residual heat after use. Allow to cool before putting in or taking out the inner pot, and before cleaning the electric rice cooker.
8. Do not operate this rice cooker when the power cord or plug damaged or if the appliance malfunctions, is dropped or has been damaged in any manner. Return it to the Authorized Service Station for examination, repair, electric or mechanical adjustment.
9. Do not let cord hang over edge of table and counter, or touch hot surface.
10. Do not add too much food or water into inner beyond the MAX line, otherwise spillage may occur and cause electric shock.
11. Use the original inner pot only, and do not knock the inner pot.
12. Do not use this cooker to boil acid and alkaline foodstuff, or for other purpose.
13. Do not use outdoors.
14. Do not place or near a hot gas or electric burner, or a heated oven.
15. Be sure to keep the space between the inner pot and the heating plate clean and free of water drop, dust, rice grain or any other foreign matter. If not, the cooker's performance will be affected and in serious case, its element burn out.
16. Do not slant the inner pot, otherwise its bottom will not be in full contact with the heating plate and its element will burn out.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliances in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user


maintenance shall not made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

18. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

*** SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY**

PARTS DESCRIPTION

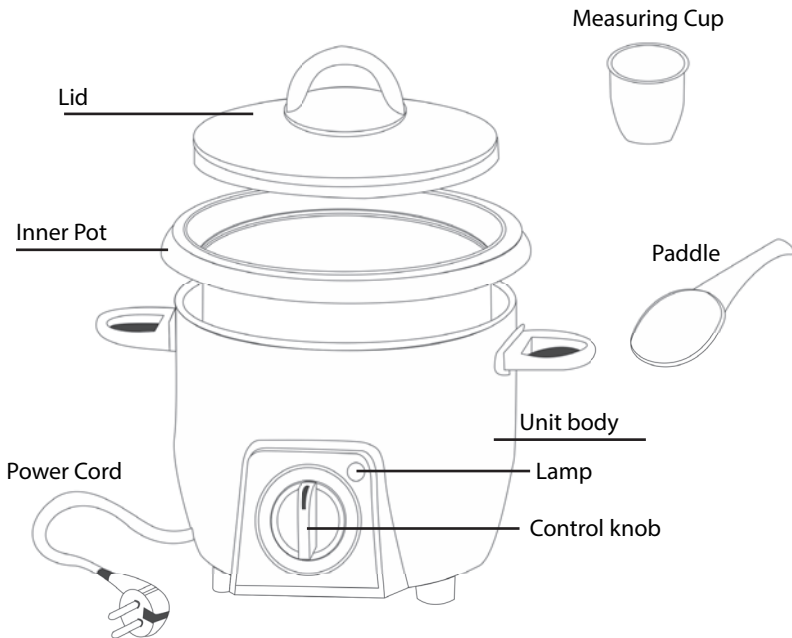

OPERATING INSTRUCTIONS

1. Put rice into the inner pot, use the level on the surface of the inner pot to adjust the water level. For example, if you cook 3 cups of rice, put the washed rice to the inner pot, then add water to level "3". Note: Since the level shows standard water levels, adjust the water volume according to your own choice.

Don't forget to clean and dry the outer surface of the inner pot before place the inner pot into the cooker, turn it lightly to right and left as shown in order to make it closely touching with the heating plate. (see fig.1)



Fig.1

*Do not wash rice in the inner pot, as it may be deformed and will spoil the cooking effect.

*Do not remove the inner pot when it is filled with water.

2. Plug the power plug into the wall outlet. Rotate the control knob to desired cooking time up to 60 minutes, according to the rice volume and cook result you need. Then the timer start running, and lamp will light up. (see fig.2)

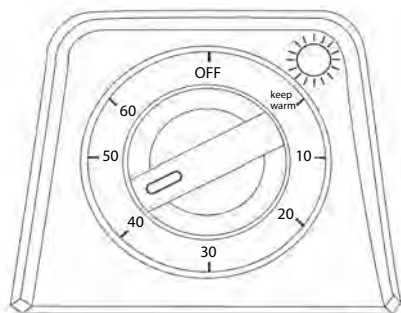


Fig.2

3. When timer run to 0, it will change to Keep warm mode.

4. After using, Rotate the control knob to “off”, hold the power plug and pull it from the electric wall receptacle

USER MAINTENANCE

Caution: Unplugged the appliance and let it cool down entirely before cleaning. Do not immerse the Rice Cooker into liquid.

•Never use diluent or benzene. Chemical wiping cloth, plastic brush, metal brush, detergent not for tablewares, whitener for cleaning.

1. Put the pot, the glass lid into water, use a sponge to, clean them, and wipe them dry.

Note: Be sure to clean the inner pot entirely after using salt for cooking, otherwise it may cause corrosion.

Handle the inner pot with care, never deform it.

2. Use a wet cloth to wipe the debris off on the main body.


3. Use a cloth with dilute tableware detergent to clean the main body. And wipe the detergent off after cleaning.

4. Keep the power cord, control panel clean and dry, otherwise it may cause problems.

5. Clean the heating plate and temperature limiting component with a well-wrung wet cloth,. It may affect rice cooking if there is rice grain or other debris on it, you can use a bamboo piece or a wooden stick to clear it.

Note: Any other servicing should be performed by an authorized service representative.

CORRECT DISPOSAL OF THIS PRODUCT

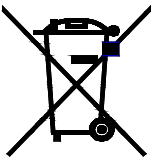

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



- German
- English
- فارسی

Rice Cooker

MRC 135 BK