MIGEL

چای ساز

GTS 305

English

فارسی

GTS 305

مشتری گرامی ضمن تشکر از حسن سلیقه و اعتماد شما به برند میگل
امیدواریم ازکار با این دستگاه لذت ببرید.

مشخصات دستگاه

ولتاژ: ۲۲۰ولت
فرکانس: ۵۰ هرتز
توان ورودی: ۱۳۵۰ وات
گنجایش سماور شیشه ای: ۳ لیتر
گنجایش قوری شیشه‌ای: ۷۰۰ میلی‌لیتر

دستورالعمل های ایمنی مهم

در هنگام استفاده از دستگاه، اقدامات مهم احتیاط آمیز زیر حتماً باید رعایت شوند. قبل از استفاده تمام راهنمایی های این دفترچه را بخوانید.

۱. پیش از اتصال دوشاخه به برق، از تطابق ولتاژ دستگاه (نوشته شده بر روی برچسب مشخصات زیر دستگاه)، با ولتاژ برق منطقه سکونتتان اطمینان حاصل نمایید.
۲. برای جلوگیری از صدمه به المنت گرمایشی، دستگاه را بدون آب به کار نیاندازید. در صورت عدم استفاده دوشاخه را از پریز جدا نگه دارید.
۳. اجازه ندهید کابل دستگاه از لبه میز یا کانتر آشپزخانه آویزان باشد.
۴. دستگاه را نزدیک یا روی اجاق گاز، منبع گرمایشی یا سطوح داغ قرار ندهید.
۵. در صورتی که دستگاه بطور تصادفی بدون آب به کار بیافتد، سیستم محافظ به طور اتوماتیک دستگاه را خاموش می‌کند. در این مواقع صبر کنید تا سماور خنک شود سپس با آب خنک آن را پر کنید و آب را جوش آورید.
۶. مطمئن شوید که سماور روی سطحی صاف ،محکم و خشک قرار دارد و کودکان به آن دسترسی نخواهند داشت. این باعث میشود تا سماور وارونه نشود و به افراد و دستگاه آسیب وارد نگردد.
۷. برای جلوگیری از آتش سوزی، برق گرفتگی یا آسیب‌های فردی، لطفاً دستگاه، کابل برق و دوشاخه را در آب یا هیچ مایع دیگر فرو نبرید.
۸. آب جوش را سریع تخلیه نکنید و برای جلوگیری از سوختگی ناشی از پاشیده شدن آب داغ دقت کنید و به آرامی این کار را انجام دهید.
۹. هنگام برداشتن قوری و یا درپوش زمانی که سماور داغ است مراقب باشید تا آب داغ پاشیده نشود.
۱۰. سطوح داغ را لمس نکنید. از دستگیره ها استفاده کنید.
۱۱. هنگام حمل سماور یا قوری حاوی آب داغ احتیاط کامل باید صورت بگیرد.
۱۲. سماور اسباب بازی نیست. اجازه ندهید کودکان با آن بازی کنند.

۱۳. استفاده از لوازم جانبی که توسط تولید کننده پیشنهاد وعرضه نمی‌شود، میتواند باعث برق گرفتگی، آتش سوزی و صدمه به دستگاه گردد.
۱۴. از تماس با بخارهای خروجی از سماور در هنگام و بلافاصله بعد از جوش آمدن آب خودداری کنید. برای برداشتن درپوش و یا قوری عجله نکنید.
۱۵. اگر از دستگاه استفاده نمی‌کنید یا قبل از تمیزکاری دوشاخه را از پریز برق جدا کنید.
۱۶. قبل از سوار کردن یا جداکردن قطعات و قبل از تمیزکاری صبر کنید تا دستگاه خنک شود.
۱۷. همیشه مطمئن باشید که درپوش بسته است و هنگام جوش آمدن، آن را برندارید. در هنگام جوش آمدن آب برداشتن درپوش (قوری) میتواند خطر ناک و باعث سوختگی شود.
۱۸. در صورت آسیب دیدگی کابل برق، حتماً آن را به دست متخصص و خدمات پس از فروش بسپارید تا کابل برق تعمیر و یا تعویض شود، از تعمیرات خودسرانه جداً خودداری نمایید.
۱۹. از این محصول فقط در زمینه کاربری تعریف شـــده استفاده شود و از آن برای مقاصد دیگر استفاده نکنید.
۲۰. اگر سماور بیش از اندازه پر شود، ممکن است آب جوش از آن بیرون بریزد.
۲۱. از این دستگاه در فضای روباز استفاده نکنید.
۲۲. این وســیله برای استفاده توســط افراد (از جمله کودکان) با ناتوانی فیزیکی، حسی یا عقلی، یا افراد بی تجربه و ناآگاه، نیســت مگر اینکه با حضور سرپرست مسئول در قبال ایمنی آنها و با نظارت یا دادن دستورالعمل استفاده از وسیله باشد.
۲۳. کودکان باید سرپرستی و نظارت شوند تا اطمینان حاصل شود که با وسایل بازی نمی کنند.
۲۴. مقدار آب ریخته شـــده درون ســـماور باید بین بیشترین و کمترین (Max و Min) درجه باشد (۰/۵ تا ۳ لیتر). این نشانه ها روی سماور نشان داده شده اند. آب اضافی ممکن اســـت از ســـماور بیرون بریزد. اجازه ندهید مقدار آب از کمترین مقدار، پایین تر باشد. در این حالت آب اضافه نمایید.
۲۵. همیشـــه دوشـــاخه دســـتگاه را به پریزی که دارای اتصال زمین است وصل کنید. در صورتی که نیاز داشـــته باشید از کابل دیگر جهت گسترش طول کابل استفاده نمایید ، کابل باید دارای سیم اتصال زمین باشد.
۲۶. جهت جلوگیری از خطرات آتش سوزی، دوشاخه را بصورت کامل درون پریز جای دهید.
۲۷. گرم شدن بدنه ی دســـتگاه در هنگام کار طبیعی است.برای جلوگیری از آسیب های احتمالی از لمس بدنه اجتناب نمایید.
۲۸. از نگه داشتن یا لمس کردن دوشاخه دستگاه با دست های خیس خودداری کنید، زیرا این کار ممکن است منجر به برق گرفتگی شود.
۲۹. از کشـــیدن کابل دستگاه جهت خارج کردن دوشاخه از برق خودداری کنید، این کار ممکن است باعث جرقه زدن، برق گرفتگی یا آسیب رسیدن به کابل گردد.
۳۰. در صورت جابجایی محل زندگی، ولتاژ را بررســـی نمایید و از تطابق آن با دســـتگاه اطمینان حاصل نمایید.
۳۱. این محصول فقط در جهت مصرف خانگی و مشـــابه آن طراحی شده است و استفاده صنعتی و تجاری از آن میسر نمی باشد.

۳۲. هنگام پر کردن مجدد سماور داغ بسیار مراقب باشید.
۳۳. پیش از کشیدن دوشاخه از برق، دستگاه را در حالت خاموش قرار دهید.
۳۴. به جز آب، مایع دیگری در سماور نریزید.
۳۵. وسیله برای استفاده خانگی و موارد مشابه زیر در نظر گرفته شده است:
–آبدارخانه های فروشگاه ها، ادارات و سایر محیط های کاری
– خانه باغ ها
– هتل ها، متل ها و هتل آپارتمان ها
– مکان هایی که امکانات آن در حد محل خواب و صرف صبحانه است
۳۶. ایـــن محصول تنها به جهت جوش آوری آب و تهیه چای و نیز فقط برای اســـتفاده خانگی و در فضای مسقف بسته طراحی شده است.
۳۷. به هیچ وجه از دســـتگاه در حمام و نیز محیط باز اســـتفاده نکنید. از دستگاه فقط در موارد تعریف شده استفاده کنید.
۳۸. تمیزکاری و نگه داری این کالا نیز نباید به دست کودکان انجام شود.
۳۹. از تماس با قطرات پاشیده احتمالی از سماور خودداری نمایید.
۴۰. هنگام جوشیدن آب درپوش سماور را باز نکنید.
۴۱. دستگاه را بر روی سطحی صاف، مستحکم و خشک استفاده نمایید.
۴۲. پیش از استفاده، عملکرد دستگاه را بررسی نمایید.
۴۳. ابتدا ســـماور را پر از آب کرده، درپوش (قوری) آن را به درســـتی ببندید، سپس کابل را به برق بزنید.
۴۴. به هیچ وجه بدون اینکه قوری را روی سماور قرار داده باشید از آن استفاده نکنید.
۴۵. از تماس با قطعات آســـیب دیده دســـتگاه (چه قطعات الکتریکی و چه مکانیکی) و همچنین مبادرت به تعمیر دســـتگاه هم می تواند موجب آسیب و صدمه بیشتر به دستگاه و هم شخص خودتان گردد؛ کالا نیز از گارانتی خارج خواهد شد.
۴۶. دستگاه را در محلی قرار دهید که پریز برق در نزدیکی اش باشد.
۴۷. هیچگونه کنترلر و یا تایمر بر دستگاه نباید نصب کنید.
۴۸. این کالا در طول کار کردن توامان رسیدگی نیاز دارد و باید تحت نظر باشد.
۴۹. از کابل سیار برای این محصول استفاده نکنید.
۵۰. هنگامی که ســـماور را پـــر یا خالی از آب میکنید، آن را از منبـــع اصلی تغذیه (پریز برق) جدا کنید.
۵۱. برای صرفه جویی در مصرف برق، فقط به میزانی که نیاز دارید آب جوش تهیه کنید.
۵۲. هرگز سماور را از علامت MAX روی بدنه ، بیشتر آب نکنید. در صورت لبریز بودن ممکن است آب از سماور بیرون بریزد.
۵۳. هرگز از تمیزکننده های ســـاینده و خورنده برای تمیزکاری قســـمت خارجی سماور استفاده نکنید زیرا ممکن است باعث خراشیدگی روی سطح سماور بشود.
۵۴. پیش از کشیدن دوشاخه از برق، دستگاه را در حالت خاموش قرار دهید.
۵۵. موارد موجود در بســـته بندی کالا را از دســـترس کودکان دور نگه دارید؛ چرا که این

مواد (پلاستیک های بسته بندی) می توانند موجب خفگی بشوند.
۵۶. استفاده از دستگاه در مواردی غیر از موارد تعریف شده، ریسک ایجاد خطر و آسیب جدی را در پی دارد و نیز موجب خارج شدن دستگاه از گارانتی خواهد شد.
۵۷. این دفترچه راهنما را نزد خود نگه دارید.
۵۸. اگر سماور بیش از حد پر شود، ممکن است آب جوش بیرون بپرد.
۵۹. در هنگام جوشیدن آب، قوری را برندارید.
۶۰. در شرایط مذکور در ذیل از کالا استفاده نشود:
– اگر بدنه کالا و یا کابل برق آسیب دیده است.
– اگر کالا از ارتفاعی سقوط کرد، آسیب ظاهری داشت و درست کار نمی کرد.
– در صورتی که قسمت های الکتریکی دستگاه آسیب دیده باشند.
– در صورت افتادن دستگاه درون آب و یا مایعات دیگر.
– در صورت پیش آمدن هریک از موارد بالا، به سرعت کابل را از برق بکشید و با مرکز خدمات پس از فروش تماس حاصل فرمایید. استفاده از دستگاه آسیب دیده می تواند بسیار خطرناک باشد و موجب آتش سوزی و آسیب های جدی گردد.
احتیاط ! قوری را بگونه ای بر روی سماور قرار دهید که بخار بطور مستقیم (از منافذ خروج بخار) به سمت دستگیره قوری هدایت نشود.
هشدار ! سطح المنت گرمازا پس از استفاده ، همچنان گرم است

اجزا دستگاه

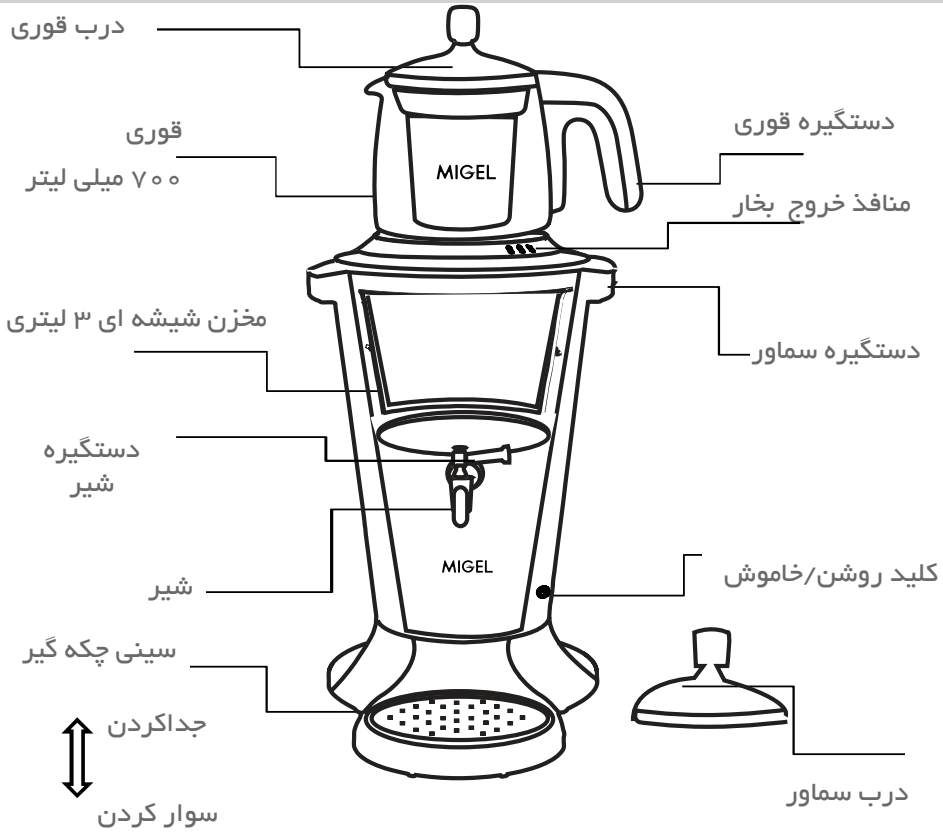

قبل از استفاده برای اولین بار

اگر از دســـتگاه برای اولین بار اســـتفاده می کنید، برای تمیزکاری ســـماور قبل از استفاده، پیشنهاد می شود ۳ لیتر آب را در آن جوش بیاورید و از طریق شیر آب سماور تخلیه و دور بریزید. ۲ بار این کار را انجام دهید.

استفاده از دستگاه

۱. درپوش را بردارید و آب درون ســـماور بریزید. به مقدار دلخواه از سطح مجاز حداقل تاحداکثر ۳ لیتر آب بریزید. آب خیلی کم در سماور باعث میشود که سماور قبل از جوش آمدن خاموش شود.

نکته: بیش از حد مجاز آب در ســـماور نریزید زیـــرا هنگام جوش آوری آب داغ به بیرون خواهد پاشید.

قوری را روی ســـماور قرار دهید و درپوش آن را بگذارید. دوشـــاخه را به پریز برق وصل کنید. کلید روشـــن/خاموش را فشار دهید. چراغ‌های قرمزرنگ درون مخزن ۳ لیتری شیشه ای روشن می‌شود که نشان از شروع کار سماور است.

۲. وقتی آب به جوش آمد،یک هشـــدار صوتی نشـــان میدهد که دستگاه به طور اتوماتیک وارد حالت گرم نگهداری شده است و چراغ نشانگر از قرمز به آبی تغییر رنگ میدهد.

۳. چای کیسه ای یا چای خشک دلخواهتان را در فیلتر قوری قرار دهید و با بازکردن شیر سماور، آب جوش در قوری شیشه ای بریزید. وقتی قوری روی سماور(در حالت روشن) قرار بگیرد، دمای آب داخل قوری به ۸۰ درجه سانتیگراد یا بیشتر میرسد.

۴. سماور بعد از حالت گرم نگهداری به طور اتوماتیک بعد از ۳ ساعت خاموش می‌شود.

۵. مدتی بعد از گرم نگهداری، بخار زیادی زیر قوری جمع میشـــود. قبل از ریختن چای، بخار زیر قوری را در یک جهت پاک کنید.

۶. هنگامی که آب سماور کم شد، آب سرد درون آن بریزید. آب در حالی که چراغ نشانگر قرمز ســـماور روشن میشود درون مخزن سه لیتری گرم شده و پس از آن وارد حالت گرم نگهداری شده و چراغ نشانگر آبی رنگ میشود.

توجه: زمانی که از سماور استفاده نمی‌کنید، مطمئن شوید که دوشاخه به پریز برق وصل نیست.

سیستم محافظ در برابر جوشیدن سماور خالی

اگر بر حســـب تصادف سماور را بدون آب روشن کنید و یا در حین کار دستگاه آب سماور تمام شـــود، سیستم محافظ ، دســـتگاه را به طور خودکار خاموش می‌کند. در این مواقع، اگر خواستید آب را جوش بیاورید، لطفاً بعد از خنک شدن سماور آب در مخزن شیشه‌ای بریزید.

تمیزکاری و مراقبت

– پیش از تمیزکاری دستگاه را خاموش نمایید و سپس دوشاخه را از برق بکشید.
– صبر نمایید تا دستگاه کاملا خنک شود.
– برای تمیز کاری بدنه از یک دستمال نرم و کمی نم دار استفاده نمایید.
– سماور و کابل آن را در آب فرو نبرید. از خیس شدن این قطعات جلوگیری کنید.
– برای تمیز کاری قوری و فیلتر قوری میتوان از آب و مایع ظرف شویی استفاده کرد.
تذکر: از ماشین ظرفشویی برای تمیز کاری قوری ، در پوش، مقر قوری، چکه گیر و فیلتر قوری استفاده نکنید.

رسوب زدایی سماور

مواد معدنی موجود در آب ممکن است باعث تغییر رنگ قسمتهای داخلی و همچنین انباشته شدن رسوبات در قسمت‌های داخلی سماور شود. بنابراین لطفاً رسوبات و جرم‌ها را در فواصل زمانی منظم از مخزن بزدایید. برای زدودن رســـوبات، از مواد رسوب زدا استفاده کنید و روش رسوب زدایی را طبق دستورالعمل کاربری مندرج در بسته بندی انجام دهید. در غیر اینصورت از روش زیر برای رسوب زدایی سماور استفاده کنید:

۱. ۳ فنجان سرکه سفید در مخزن سماور بریزید و بقیه حجم مخزن را با آب تا علامت حداکثر پر کنید تا سرکه سفید با آب کاملاً ترکیب شود و تمام سطح رسوبات را بپوشاند. بگذارید (حدود ۸ الی ۱۰ ساعت) بماند. در طول این مدت آب را نجوشانید.

۲. مایع را دور بریزید. با آب تمیز سماور را تا علامت حداکثر پر کنید. آب را بجوشانید و دور بریزید. چند بار این کار را تکرار کنید تا هیچ بویی به مشام نرسد.

تمیزکاری فیلتر قوری

فیلتر قوری را به طور منظم تمیز کنید. با برسی نرم یا پارچه ای نمدار و ضخیم آن را تمیز کنید.
احتیاط: برای تمیزکردن بدنه سماور از تمیزکننده های شیمیایی، فلزی، چوبی و ساینده استفاده نکنید. از تمیزکننده های حاوی مواد سمی برای تمیزکردن دستگاه استفاده نکنید.

نگهداری

وقتی از دستگاه استفاده نمی کنید، قبل از جمع آوری، سماور را تمیز و خشک کنید. کابل برق را دور محفظه نگهداری بپیچید. دستگاه را در مکانی به دور از نور آفتاب و با تهویه مناسب نگهداری کنید.

بازیافت

شما می توانید به حفاظت از محیط زیست کمک کنید!
لطفاً به مقررات محلی توجه کنید. لوازم برقی مستعمل را به مراکز ویژه‌ی جمع‌آوری این دستگاه‌ها تحویل دهید.

Removal of mineral deposit

The mineral substances from tap water are possible to deposit at the bottom of glass container, which will result in grime and then influence the service performance of appliance. So please remove the grime or scale from the glass container regularly. Please use scale remover and refer to its instruction manual to remove the grime or scale. In addition, you can also remove the grime or scale with white vinegar according to following methods:

1. Infuse 3 cups of white vinegar into 3L glass container, then add water till the mixture of vinegar and water fully immerse the sediment in the glass container, ;marinate all night, do not boil.
2. Empty the mixture in container, infuse purified water into the glass container to maximum scale, and discard the water after it's' boiling. Repeat this operation for several times till there is no smell.

Cleaning the filter

Clean the filter regularly and wipe it with soft brush or wild & damp cloth.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of samovar. Never use a poisonous cleaner to clean the product.

Storage

When not in use, wipe and dry the samovar before storage, loop the power cord around the cord storage.

Envirnoment Friendly Disposal

You can help to protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

keep warm mode automatically. The indication light will be changed from red to blue.

4. Put tea bag or tea leaf that you like into filter of glass tea pot, infuse the boiling water into glass tea pot through the tap. When tea pot is kept on the top of samovar (working mode), the temperature of water inside tea pot will reach on or above 80℃.

5. The samovar will be cut off automatically after 3 hours when it enter into keep warm mode.

6. After some time of keeping warm, there is much steam under the bottom of tea pot, wipe the steam at one direction until the steam is clean before pouring out the tea.

7. Infuse the cold water into 3L glass container when the water comes less, the water will be reheated with red light indication inside 3L glass container, then turn blue when samovar enter into keep warm mode again.

NOTE: Ensure power supply is turned off when the samovar is not in use.

Saftey system against empty samovar boiling

If you accidentally turn on the samovar without water, or if the samovar runs out of water during operation, the saftey system will automatically turn off the device. In these cases, if you want to boil water, please pour the water into the glass tank after the samovar has cooled down.

Cleaning & maintenance

- Always disconnect the appliance from the power outlet before cleaning.
- Never immerse the samovar or cord into water, or allow moisture to contact with these parts.
- Wait for the device to cool down completely.
- Use a soft and damp cloth to clean the body.
- Water and dishwashing liquid can be used to clean the teapot and teapot filter.

Note: Do not use a dishwasher to clean the teapot, cover, steam vent, drip tray and filter.

Part Name

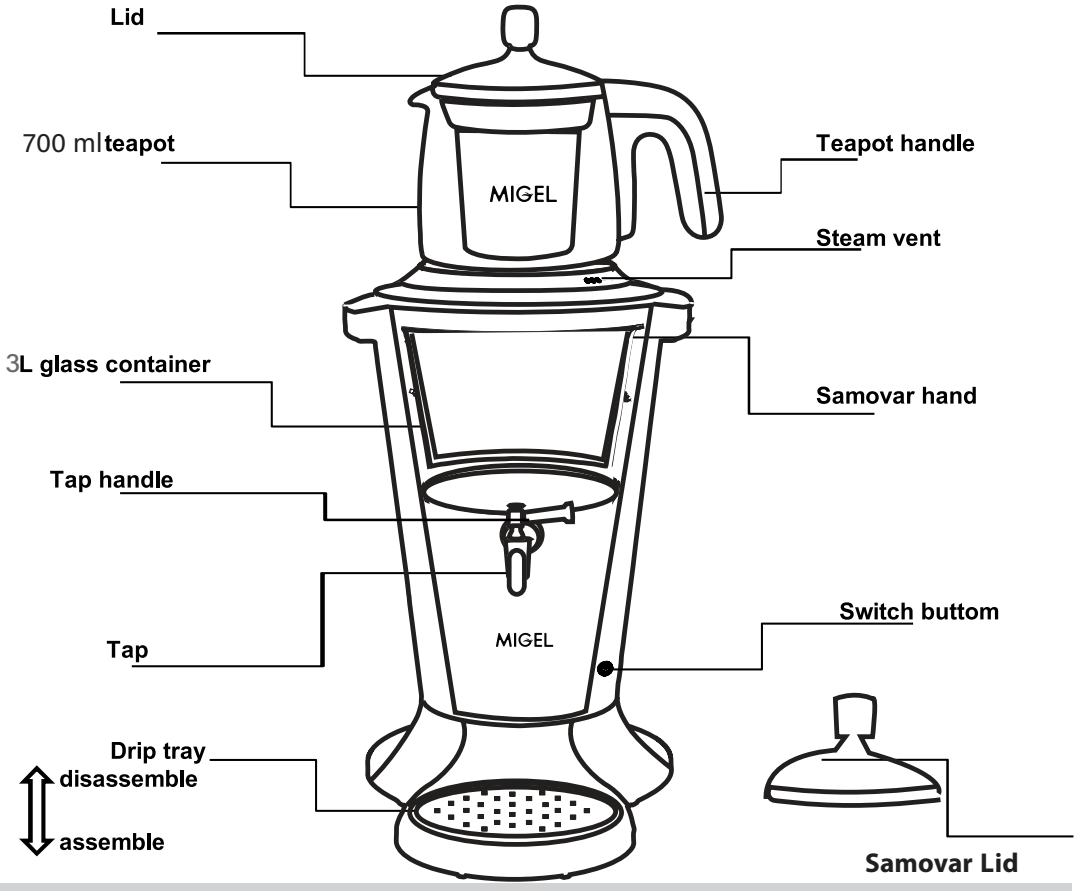

Before initial use

If you are using the samovar for the first time, it's recommended that you clean your samovar before use by boiling full 3L water twice and then discarding the water.

Operation

1. Open the lid and infuse the desired amount of water into 3L glass container of samovar. Always infuse the water between the minimum and 3L maximum marks. Too little water will result the samovar switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connection the power card to the outlet.

2. Take the glass tea pot on top of samovar, cover with lid, connect the plug into power outlet, press the on/off button' on right side of samovar, the red lights inside 3L glass container will light up which indicate the samovar starts to work.

3. When water boiling, three BI sound to indicate the samovar have been entered into

48. This product always needs supervision during operation and must be monitored.

49. Do not use an extension cable for this device. If you have to use an extension, this extension cable must be able to pass the electric current corresponding to the maximum power of the device. Determining the parameters of cable length, cable diameter, etc. play a vital role in this issue. To avoid any possible danger, make sure that you consult an expert before doing this.

50. When you are going to empty or fill the water in the samovar, unplug the device from the electrical outlet.

51. To save electricity, prepare only as much boiling water as you need.

52. Never fill the samovar with water more than the MAX mark printed on the samovar. In this case, water may splash out while boiling.

53. For cleaning, do not use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

54. To disconnect, turn any control to "OFF", and remove the plug from the wall outlet.

55. Keep all items in the product packaging out of the reach of children; these materials (plastic bags) may cause suffocation.

56. Using the device in cases other than those considered entails the risk of causing danger and serious injury. Also, the product will no longer include a warranty.

57. Save these instructions.

58. If too much water is poured into the samovar or samovar, the water may splash out while boiling.

59. Do not lift the teapot from the samovar while the water in the samovar is boiling.

60. In the following conditions, the product shall not be used.

If the body of the product or its power cable is damaged.

If the product falls from a height and is damaged and does not work properly.

If the electrical parts of the device are damaged.

If the device falls into water or other liquids.

If any of the above occurs, quickly unplug the device from the outlet and call the after-sales service center of Sanjeh Kish Company. Using a damaged device can be very dangerous and cause fire and serious injuries.

Caution: Place the teapot in a position on the samovar so that the steam is not directed to the handle of the teapot through the steam outlet holes.

Warning: The surface of the heating element is still hot after use.

28. Avoid holding and touching the device's plug with wet hands; this may lead to electric shock.

29. Do not disconnect the plug by pulling on the cord. Doing so may cause sparking, electric shock, or damage to the cable.

30. In case of moving place of residence, check that the voltage power corresponds to the one shown on the appliance nameplate.

31. This product is intended for household use and similar applications only. Industrial and commercial use is not possible.

32. Be very careful when refilling the water inside the samovar that is hot.

33. To disconnect, turn any control to "OFF", and remove the plug from the wall outlet. Always hold the plug. But never pull the cord.

34. Do not pour liquid other than water into the samovar.

35. This device is intended for home use and similar applications such as:

- The location of staff kitchens in stores, offices, and other work environments.
- Farmhouses.
- By customers of hotels, motels, and other residential environments.
- Places to rest and have breakfast.

36. This product is designed only for boiling water or making tea indoors.

37. Do not use the device in the bathroom or outdoors. Use the device only for the intended use.

38. Cleaning and user maintenance shall not be made by children.

39. Do not expose yourself to possible splashes of boiling water from the samovar.

40. Do not remove the lid of the samovar when the water is boiling in the samovar.

41. Make sure that the tea maker is placed on a flat, firm, and dry surface.

42. Check the operation of the device before using it.

43. First, pour water into the samovar, put the lid (or teapot) on it, and then connect the plug to the electrical outlet.

44. Do not use the device without placing the teapot on the samovar.

45. Touching the damaged parts of the device, including electrical and mechanical parts, and trying to repair the device may lead to more damage to the device and yourself. Also, the product will no longer include a warranty.

46. Place the device in a position where the power outlet is close to it.

47. Do not add a controller or timer to the device.

10. Do not touch hot surfaces. Use handles or knobs.

11. You must be careful when carrying a samovar or teapot that contains hot water.

12. The tea maker is not a toy. Children shall not play with the appliance.

13. The use of accessory attachments not recommended by the appliance manufacturer may cause the risk of fire, electric hazard, and damage to the device.

14. Avoid exposure to the steam coming out of the samovar during and immediately after boiling water. Do not hurry to remove the lid and teapot.

15. Unplug from the outlet when not in use and before cleaning.

16. Please wait for the device to cool down before removing and installing the device's parts or cleaning it.

17. Always make sure that the lid is on the device, and do not remove it while the water is boiling. Removing the lid (teapot) while the water is boiling can be hazardous and cause burns.

18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

19. Do not use the appliance for other than intended use.

20. If the samovar is overfilled, boiling water may spill out.

21. Do not use outdoors.

22. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

23. Children should be supervised to ensure that they do not play with the appliance.

24. The amount of water poured into the samovar should be between the maximum and the minimum. (0.5 to 3 liters) These signs are marked on the samovar. Excess water may spill out as the water boils. Do not let the water level be lower than the minimum. In this case, add water to the samovar.

25. Always use a power supply with reliable grounding. If you need an extension, use an extension that has a reliable grounding.

26. Make sure the appliance is plugged into the wall socket properly to avoid the risk of fire.

27. It is normal for the device's surfaces to heat up during operation. Avoid touching the body of the device to avoid possible damage.

Dear customer !
Thanks for your worthful choice and confidence to Migel brand. We really hope that you enjoy operating this product

Technical Data

Voltage:.....220V
Frequency:.....50Hz
Power: 1350W
Glass samovar capacity: 3L
Glass teapot capacity: 700ml

Regulation

Please read this manual carefully before using it.

When using electrical appliances, basic precautions should always be followed, including the following:

1. Before connecting the plug to a power socket, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it.

2. Do not operate the device without water to avoid damage to the heating element. Unplug from the outlet when not in use.

3. Do not let the cord hang over the edge of the table or counter.

4. Do not place it on or near a hot gas, electric burner, or hot surface.

5. If the device accidentally starts working without water, the protection system will automatically turn off the device. In these cases, wait until the element cools down. Then fill the samovar with cold water and turn on the device.

6. Make sure that the tea maker is placed on a flat, firm, and dry surface. And children will not have access to it. This prevents the samovar from tipping over and causing damage to the device and people.

7. To protect against the risk of fire, electric hazard, and injury to persons do not immerse the device or the cord or plug in water or other liquid.

8. To avoid burns caused by splashing hot water, do not drain the boiling water quickly and do it slowly.

9. Be careful of splashing hot water when removing the teapot or lid from the samovar while the samovar is hot.

MIGEL

English

فارسی

Tea Station

GTS 305